	Date		
	2025.06.11		

Side

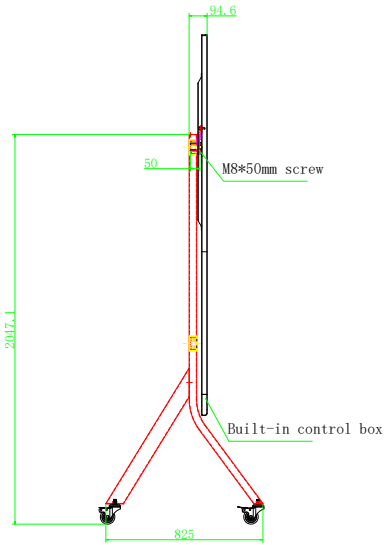

Rear

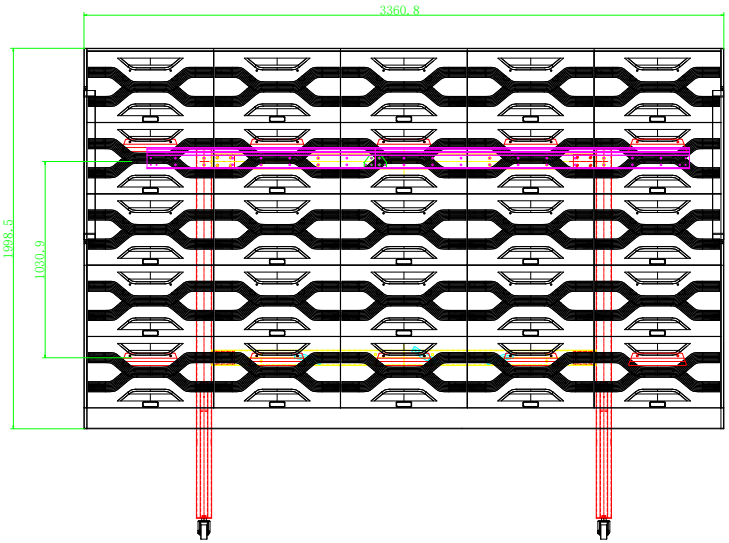

Front

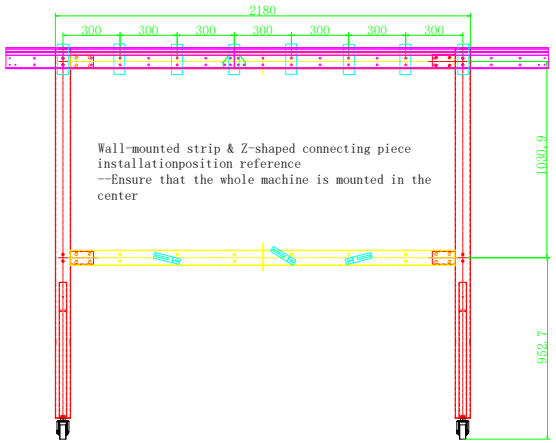

Wall hanging strip assembly diagram

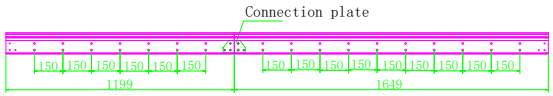

installation steps:

1. Install the tripod;
2. Assemble the wall hanging strip assembly according to the diagram and instructions
3. Install the Z-shaped connecting piece on the bottom beam of the tripod at the position shown in the figure, but do not tighten the screws yet;
4. Use M8*20 screws to tighten the Z-shaped connecting piece in the box installation screw hole;
5. Hang the entire screen on the tripod;
6. The tripod structure shown in the figure refers to ST90.

LED Model - LX150V07
Stand Model - ST90